Standard Controller (Rectangle Controller)

To View Min/Max 'Air' Temperature



STEP 1

RUNNING LOAD TEMPERATURE

The number shown on a resting display is the running load temperature



STEP 2

Press and quickly release button + "thi" will appear on the display



STEP 3

Press and hold button again to display the MAXIMUM temperature value



STEP 4

Record the temperature

You can download min/max tables from: www.lec-medical.co.uk/support/min-max-tables



STEP 5

Release button - "tlo" will appear on the display



STEP 6

Press and hold button again to display the MINIMUM temperature value



STEP 7

T1 will appear, ignore as this function is not used



STEP 8

Record the temperature

You can download min/max tables from: www.lec-medical.co.uk/support/min-max-tables

To Reset Min/Max 'Air' Temperature



STEP 1



STEP 2

Press and hold the button again to display the MAXIMUM temperature value



STEP 3

Keeping held, press button at the same time. The maximum has now been reset



STEP 4

Release both buttons - "tlo" appears on the screen. Press and hold button again to display the MINIMUM temperature value



STEP 5

Keeping i held, press button



STEP 6

The MINIMUM has been reset and the new values will be stored



STEP 7

T1 will appear, ignore as this function is not used



STEP 8

After 5 seconds the display will return to normal, or press button